




**Н.м. "EWA" LOZ120x200 без основания**

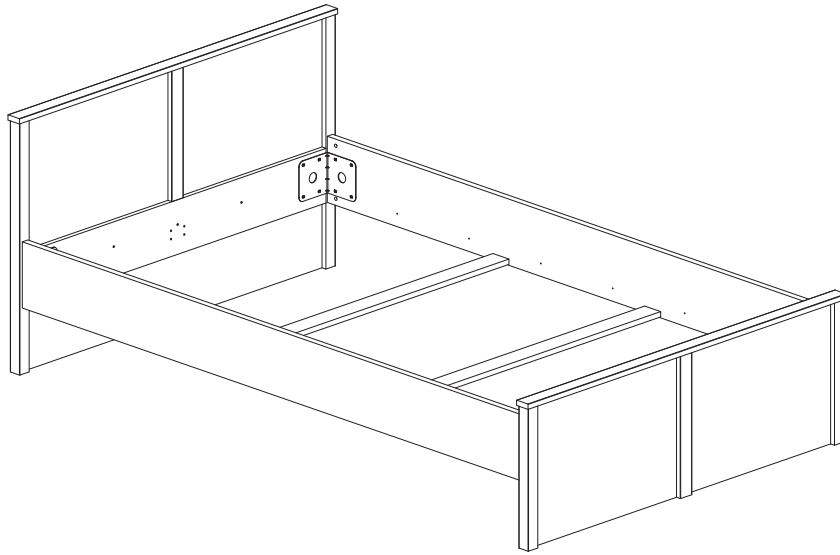















**Н.м. "EWA" LOZ120x200 Д**

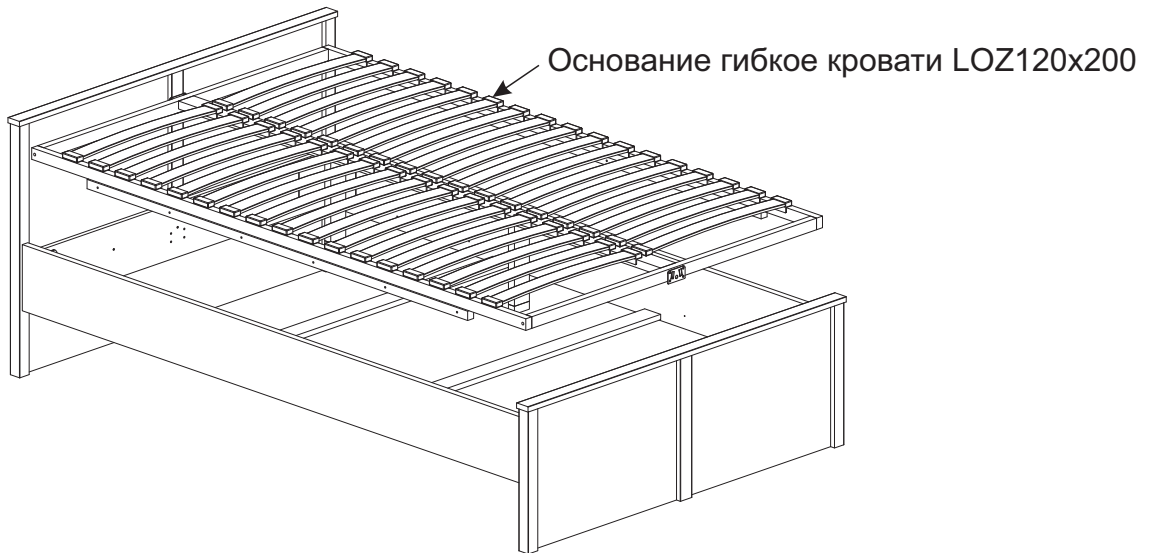













**Н.м. "EWA" LOZ120x200 М**

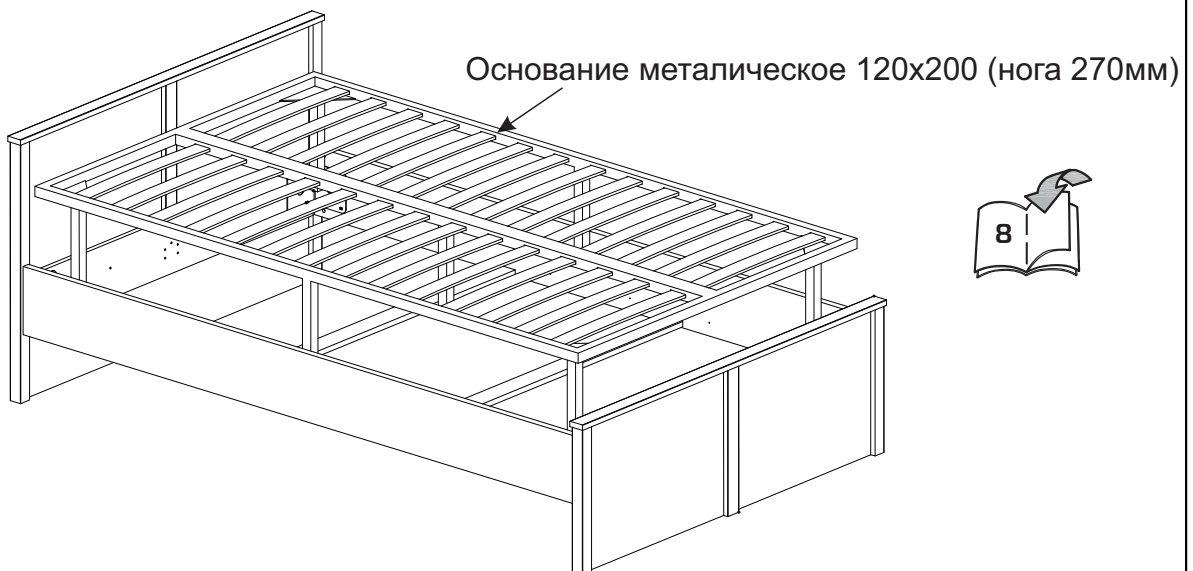

A	B	C			D	E
1	B151-1171	200	2000	22	1	1/3
2	B151-0306	1189	431	22	1	2/3
3	B151-0307	1189	831	22	1	2/3
4	B151-5115	831	38	38	1	1/3
5	B151-5116	831	38	38	1	1/3
6	B151-5117	431	38	38	1	1/3
7	B151-5118	431	38	38	1	1/3
8	B151-5119	1275	46	16	2	1/3
9	B151-4107	1189	165	16	1	2/3
10	B151-5120	466	46	16	1	2/3
11	B151-5122	431	46	16	1	2/3
12	B151-4109	1200	80	16	2	2/3
13	B151-1172	200	2000	22	1	1/3
15	B156-524	60	24	24	2	1/3
-	Фурнитура / Accessories				1	3/3

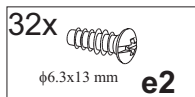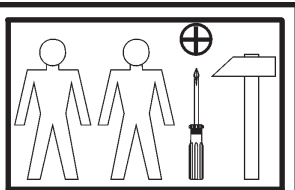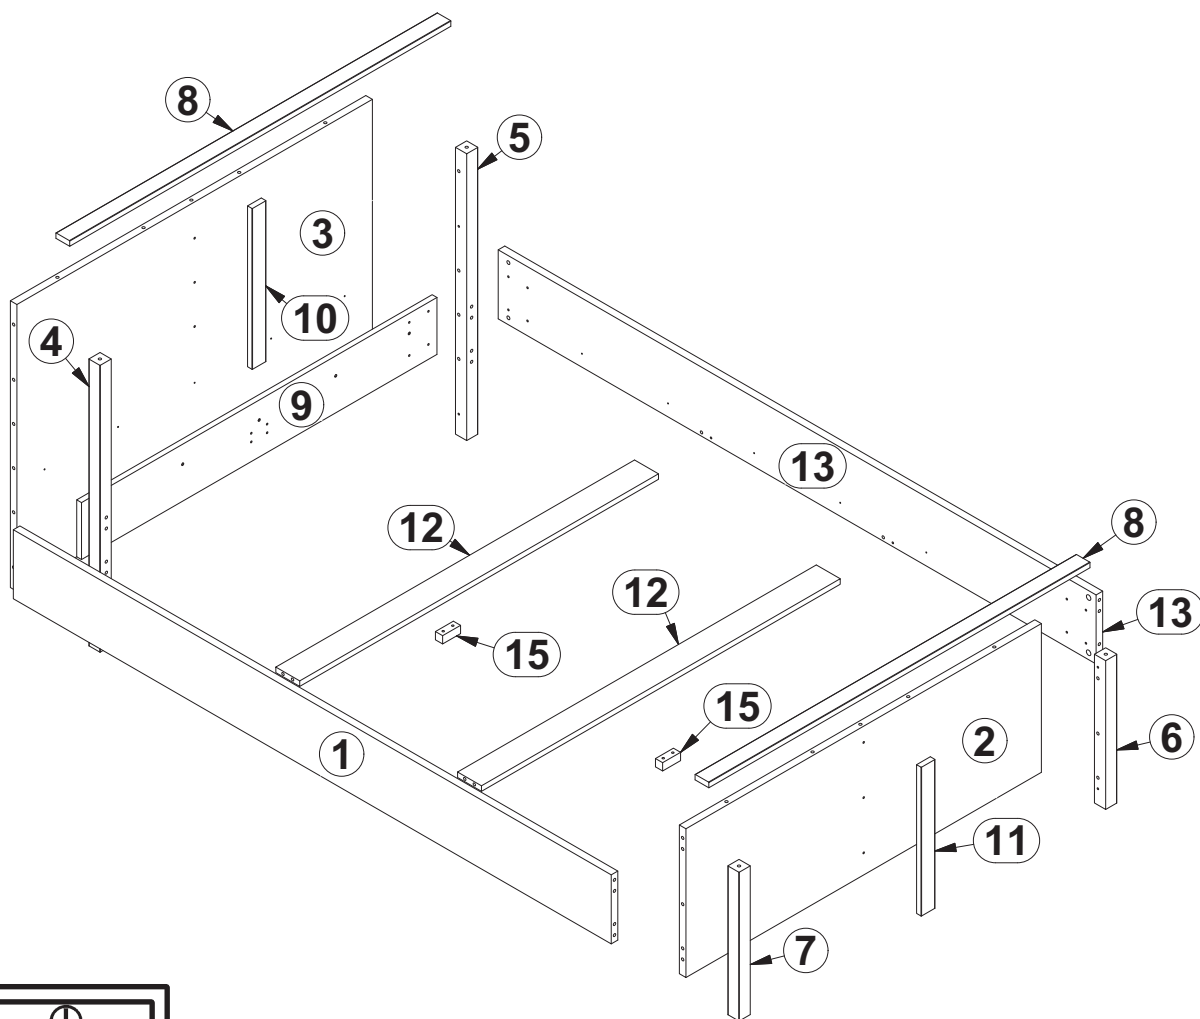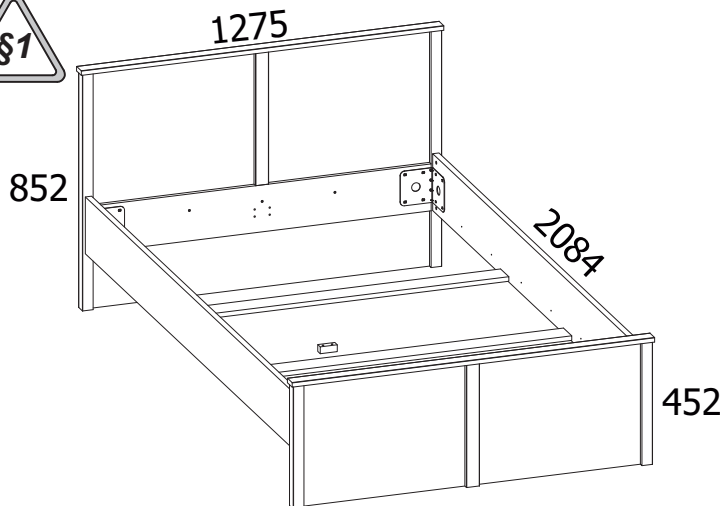

# 1

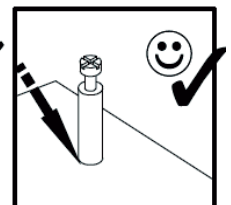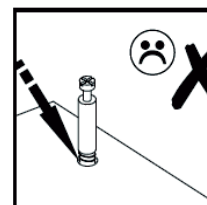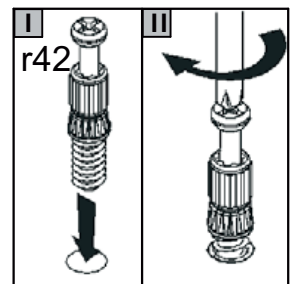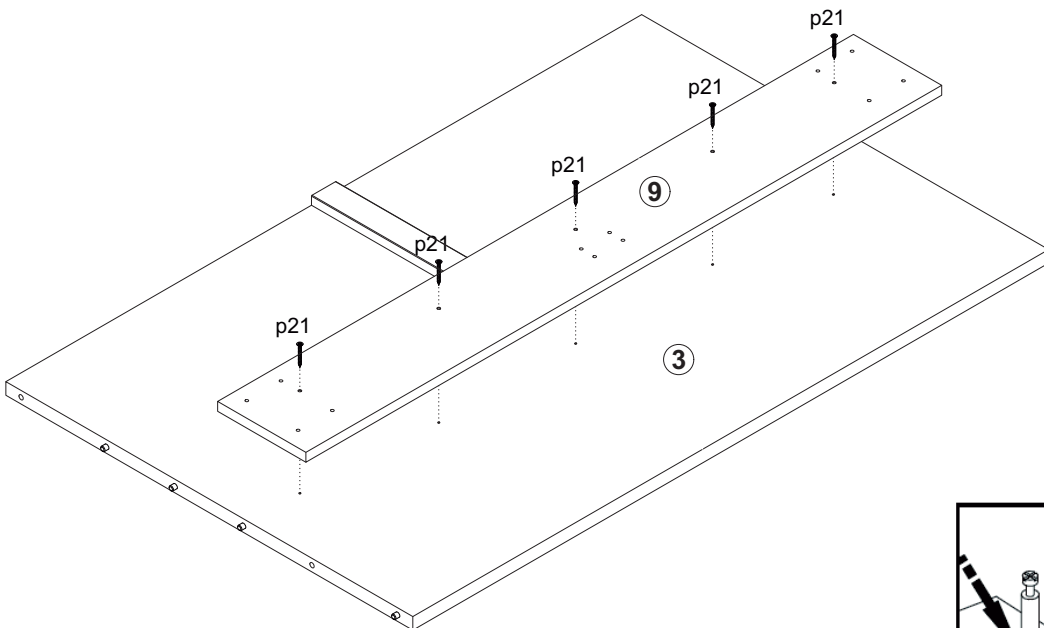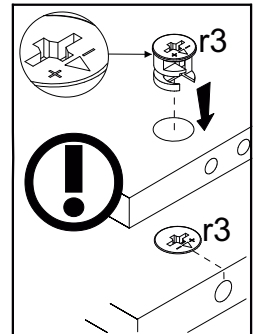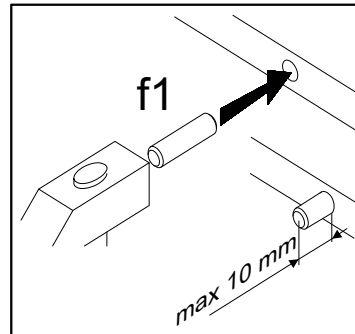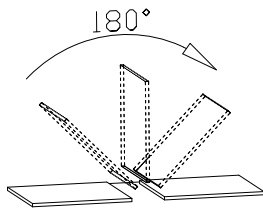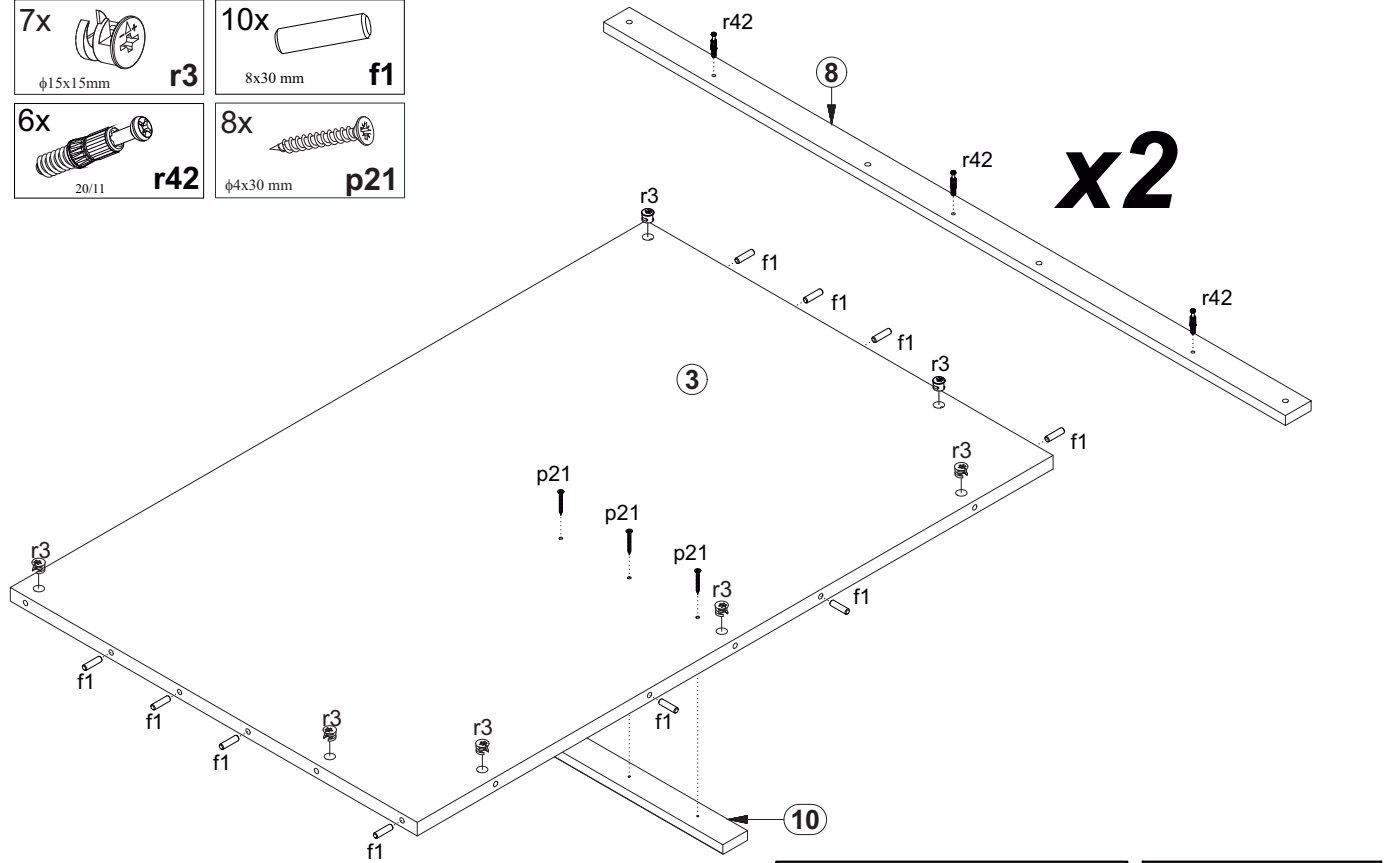

# 2



16x



φ6.3x13 mm

e2

4x



115x115x122 mm


n106

4x



r1

24x



f1

11x



r3

16x



r42

4x

















r43

3x





p21





# x2

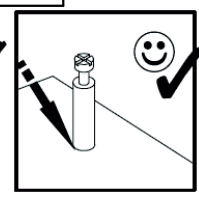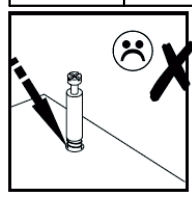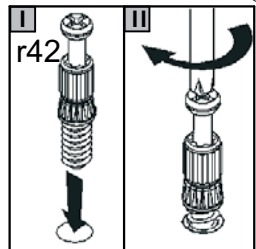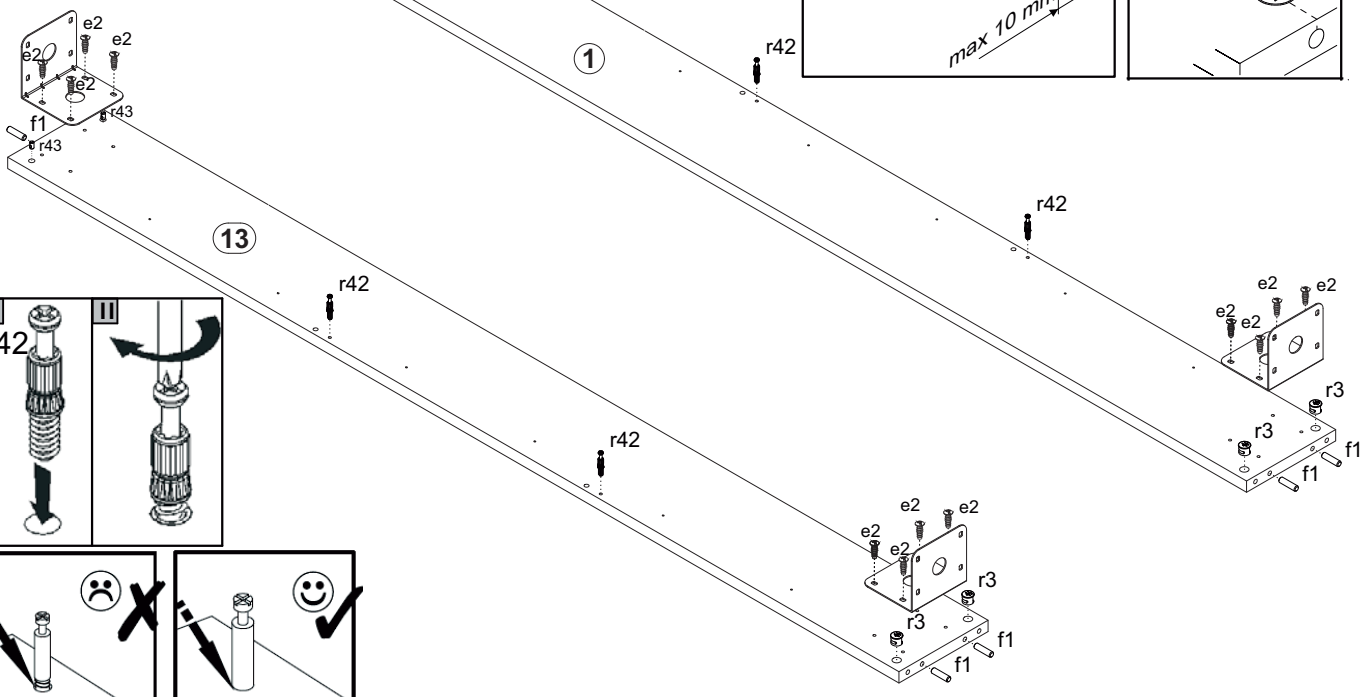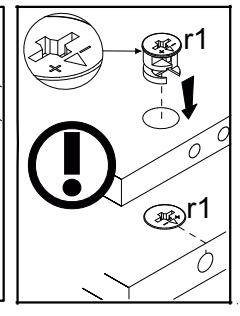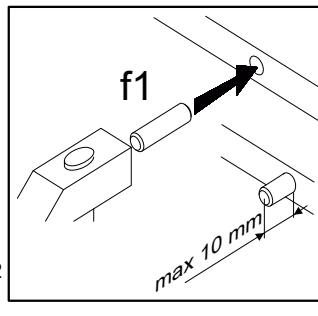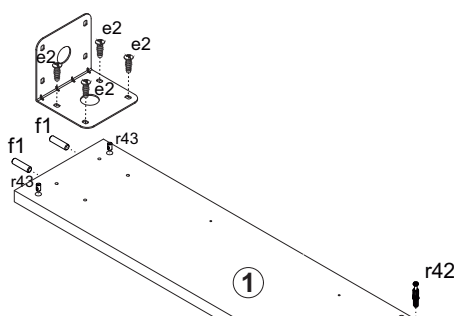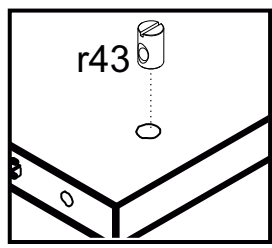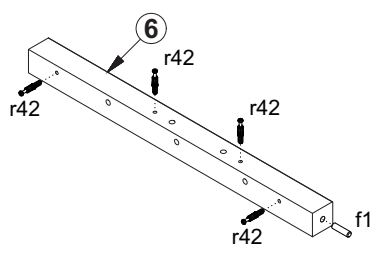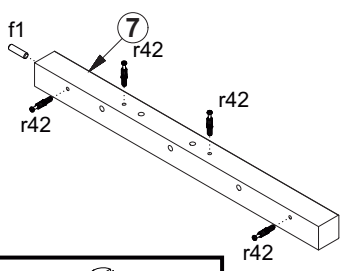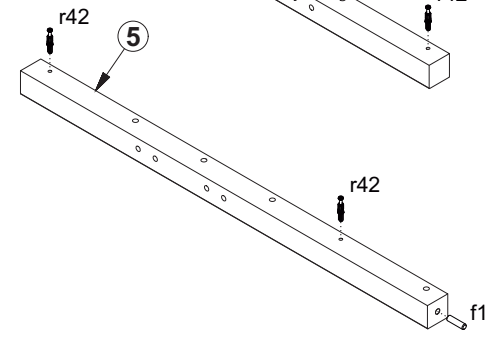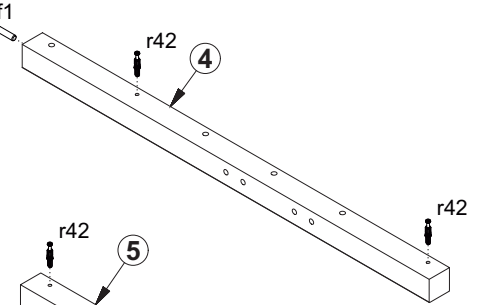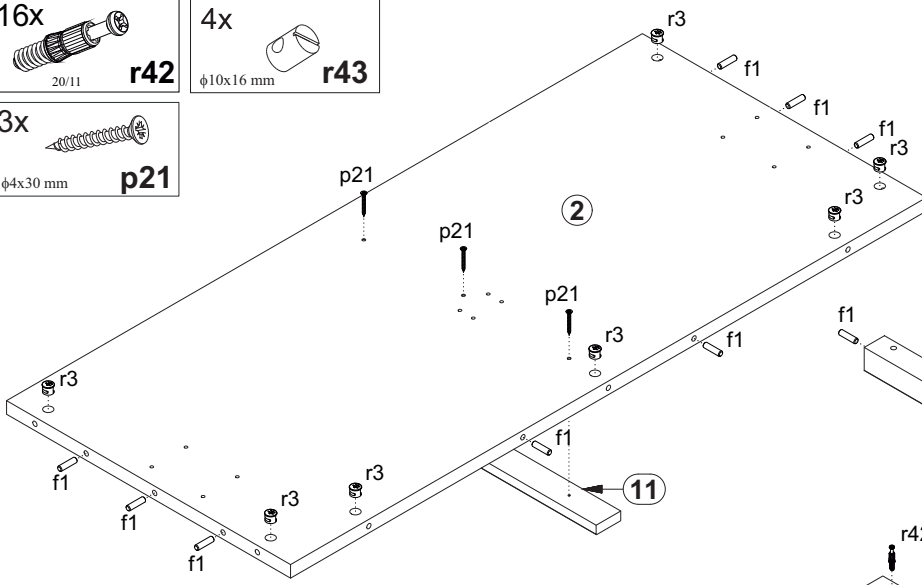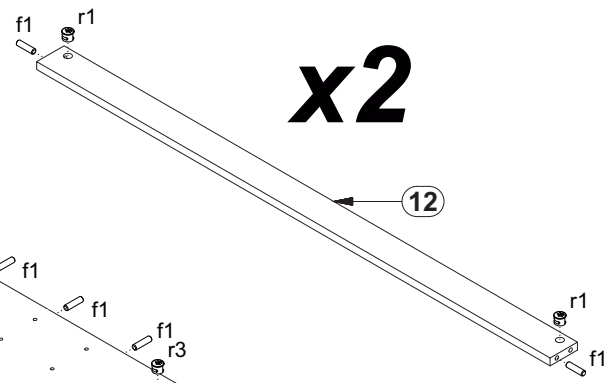



# 3

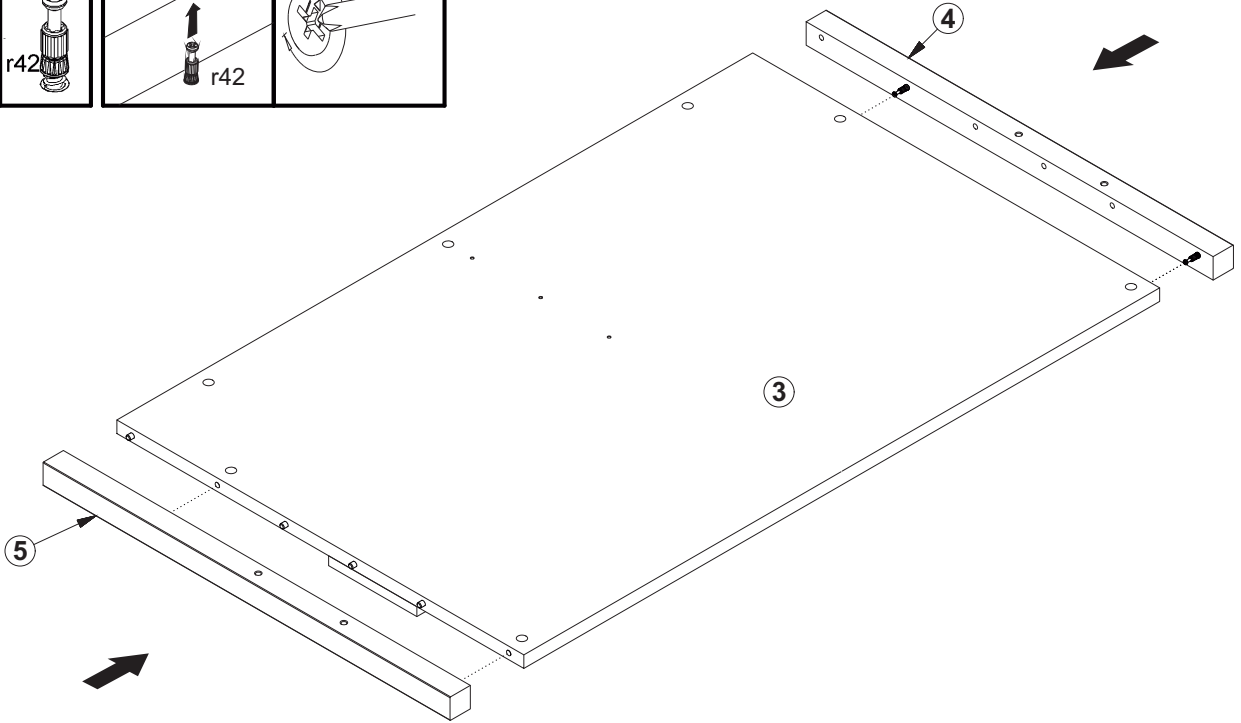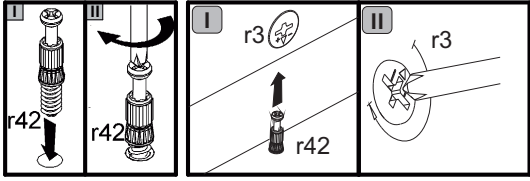





# 4

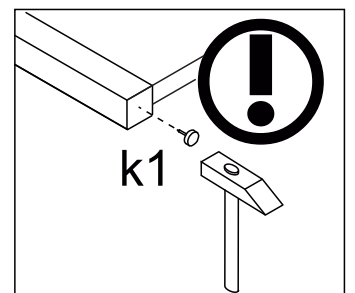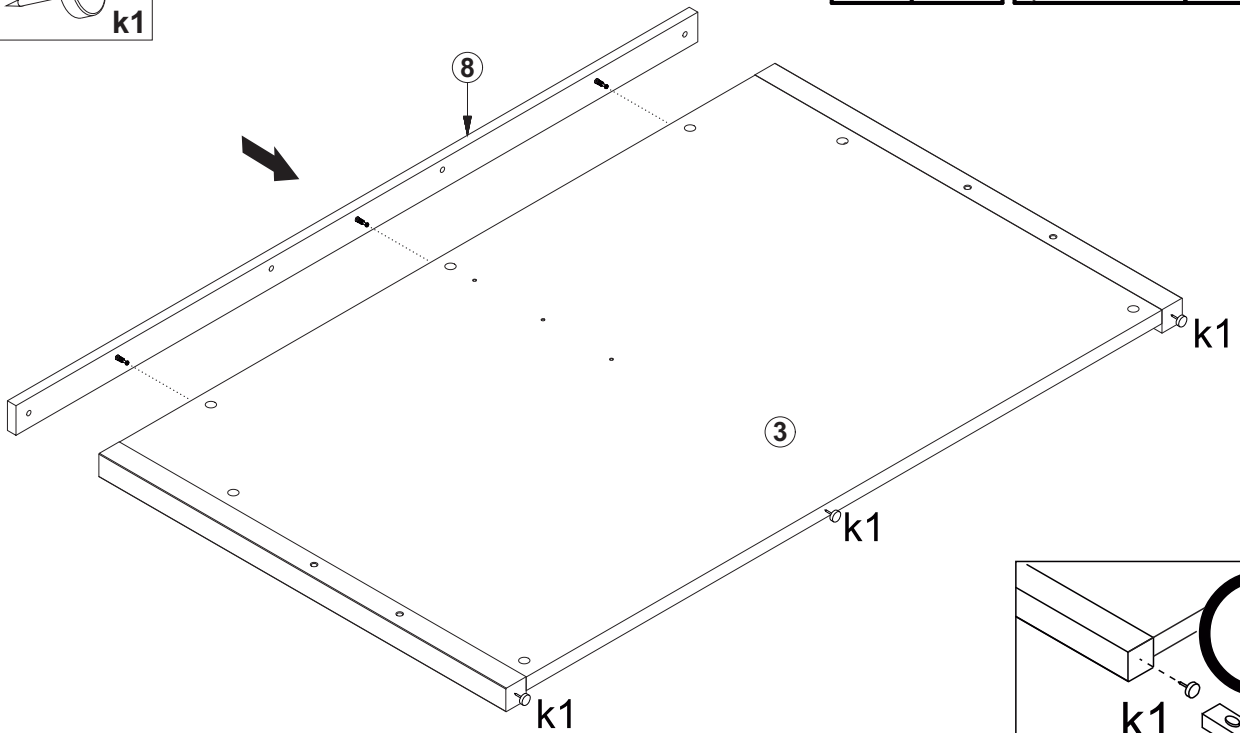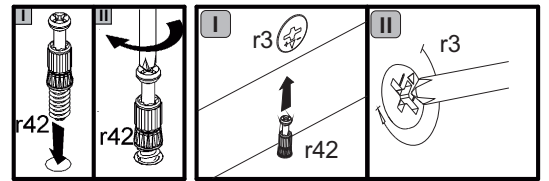



# 5

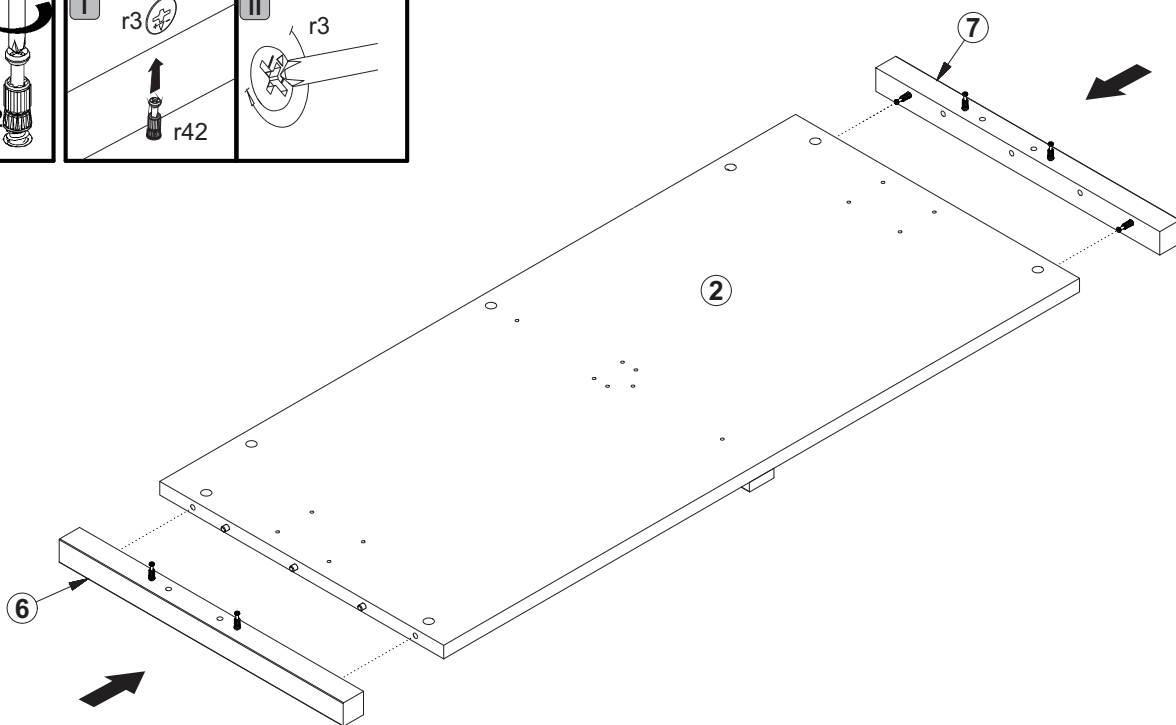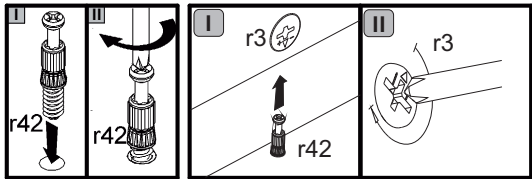


# 6

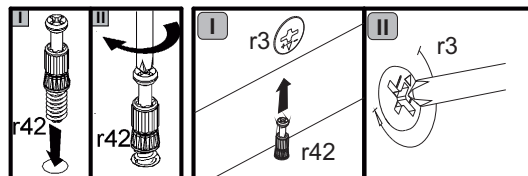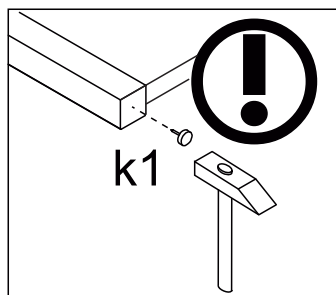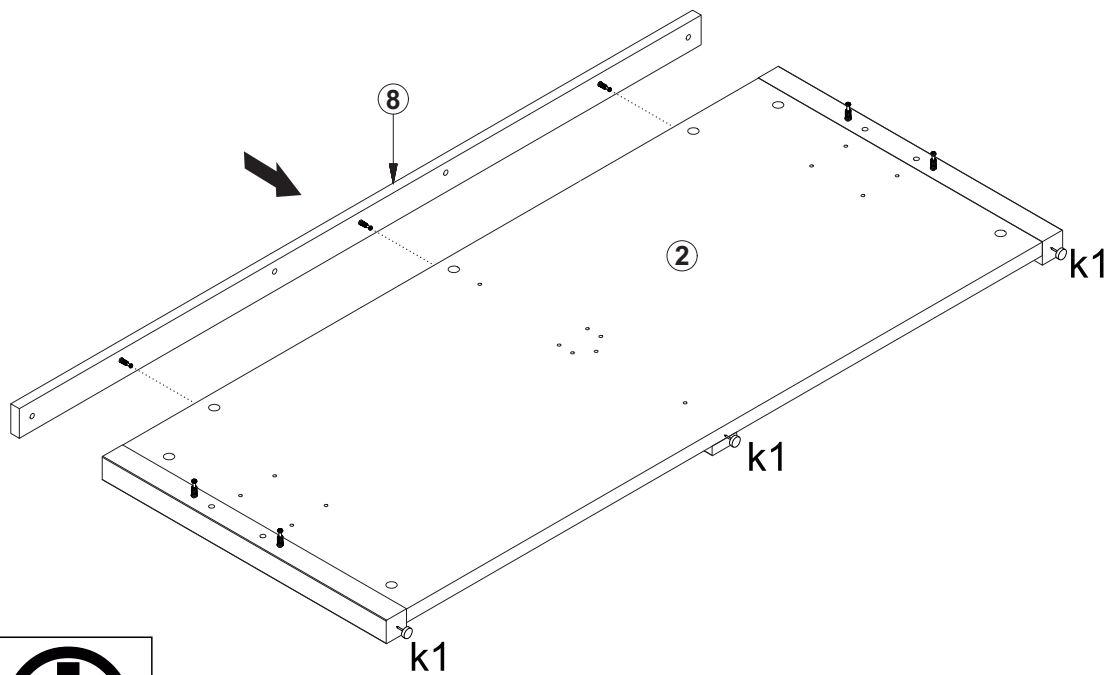

# 7

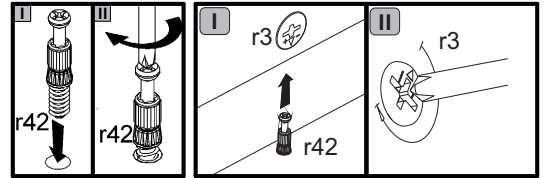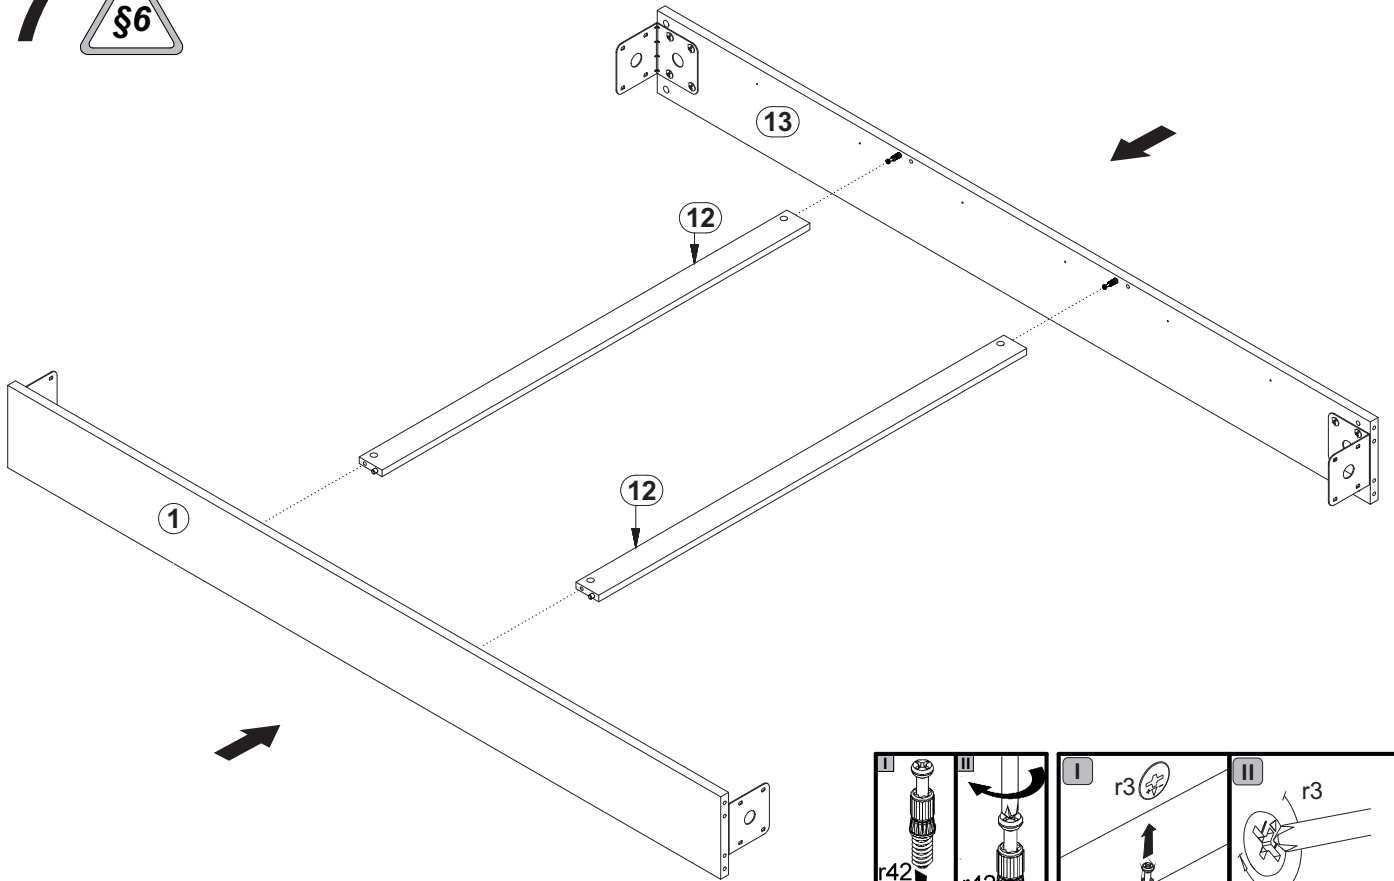



# 8

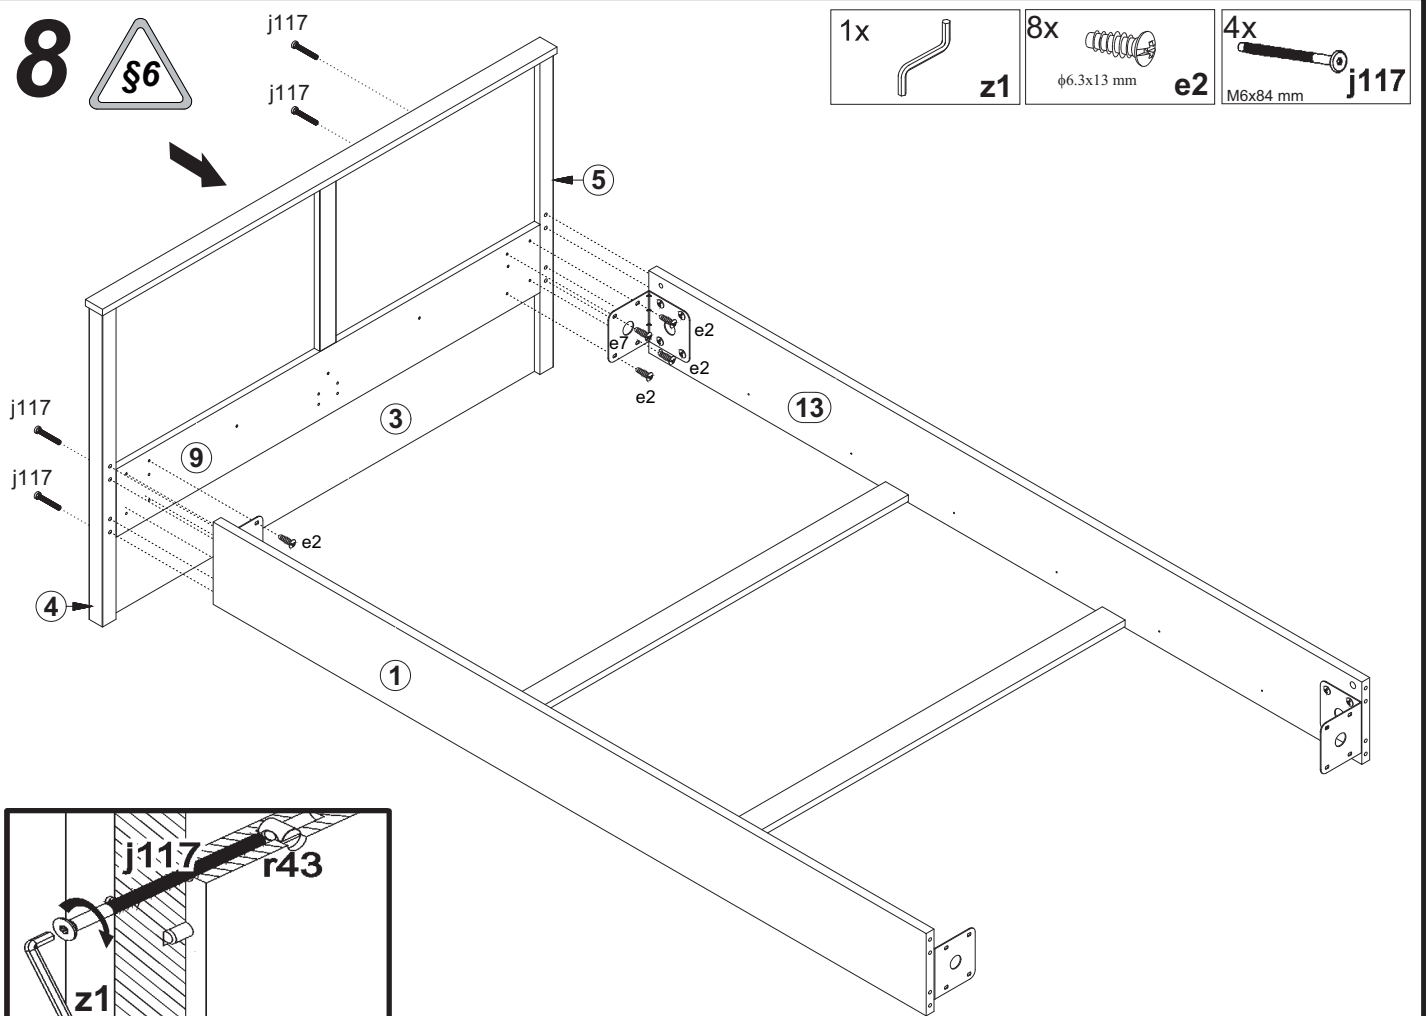

# 9



8x  
φ6.3x13 mm e2

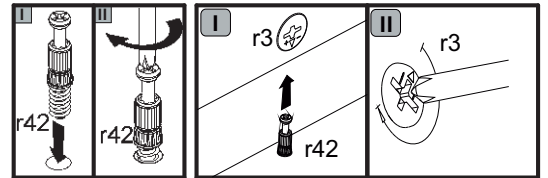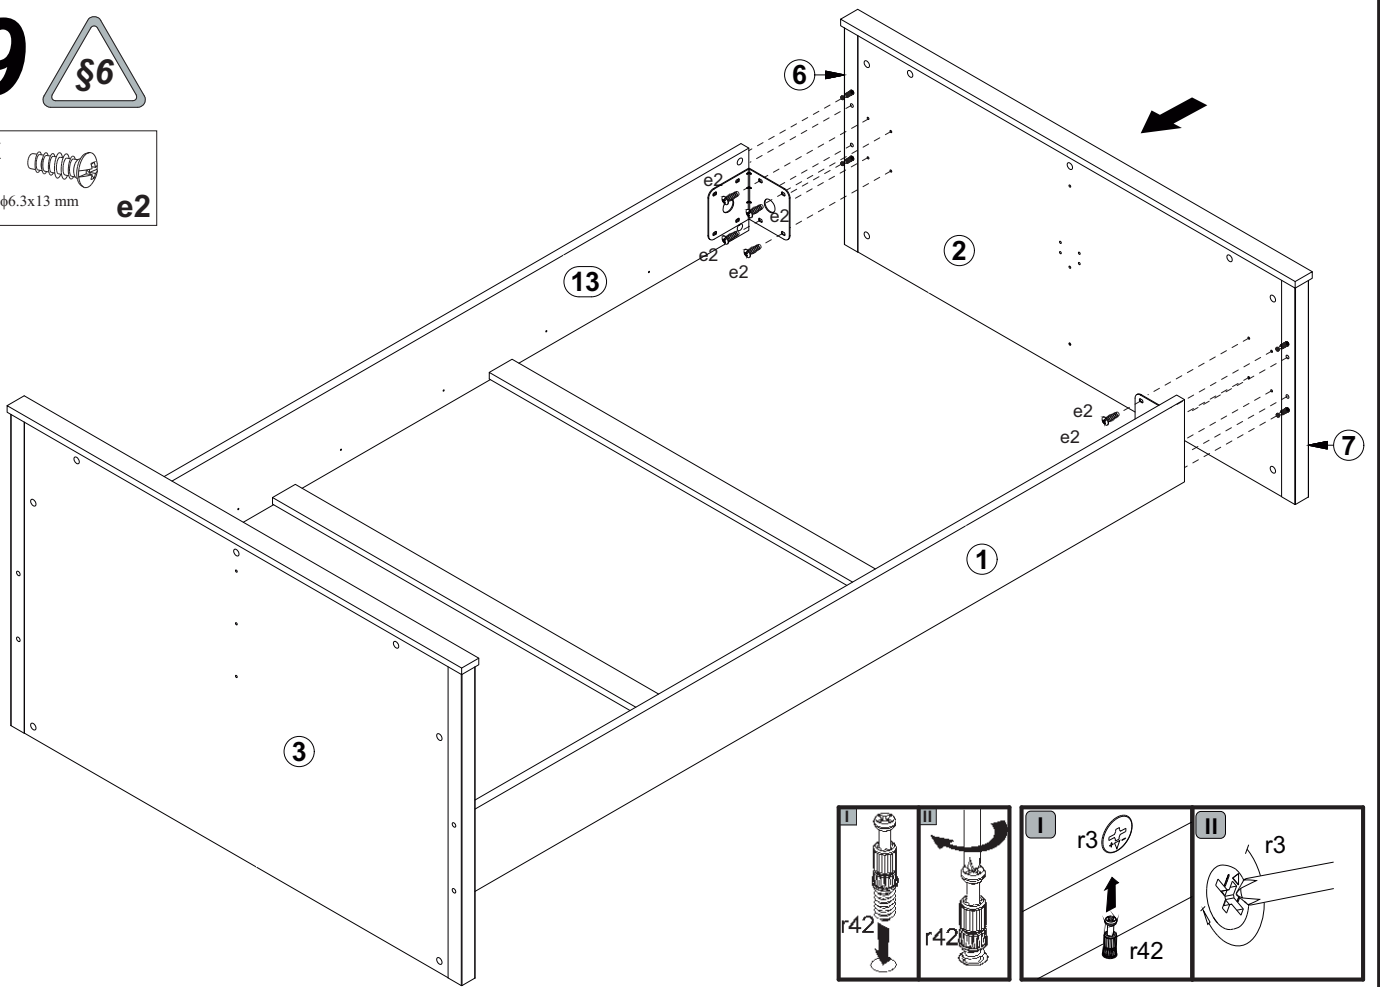

# 10



B151-LOZ120x200 Основание гибкое кровати 120x200 (the base under a mattress)



2x  
16 s2

4x  
7x70 mm e27

